
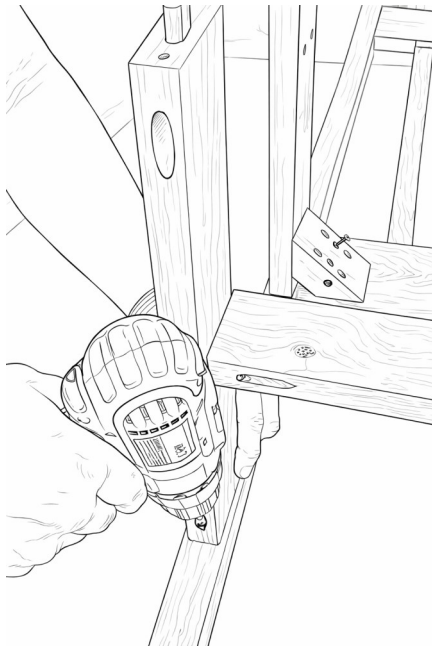


Fisher Enterprises

Tuscan Chair Instructions


Step 1

Place chair back on a flat surface. Locate side rails and match numbers (1,2,3) With a small amount of glue, attach to chair back. Locate corner blocks (labeled b for back). Attach "b" corner blocks with glue and screws. Two 2 1/2" and four 1 1/4".

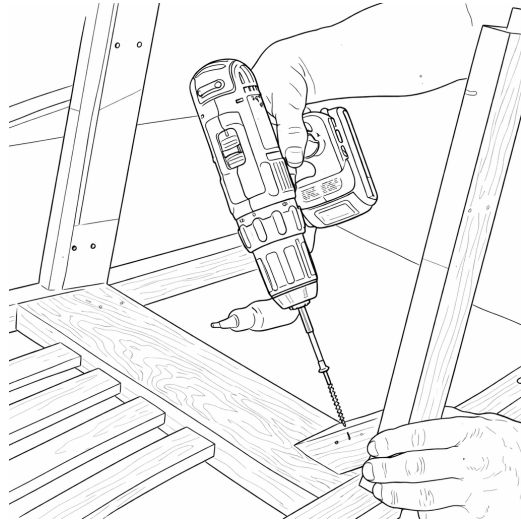

Step 2

Attach bottom stabilizer matching numbers using glue and 1 5/8" screws.

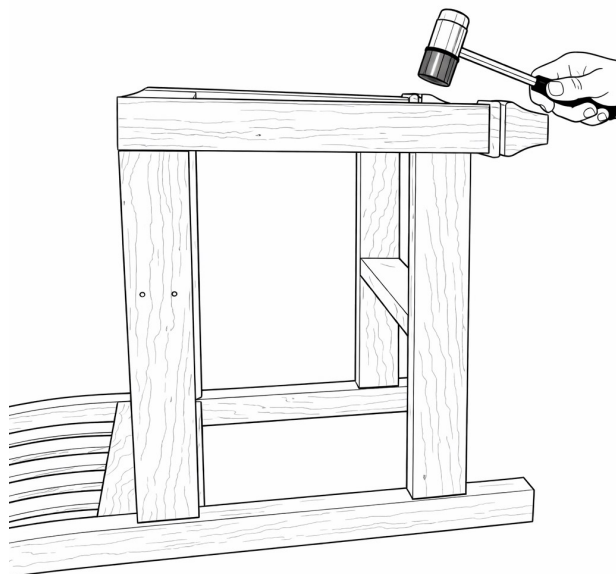


Step 3

Attach chair front as shown. Attach corner blocks for the front.


Fisher Enterprises

Tuscan Chair Instructions

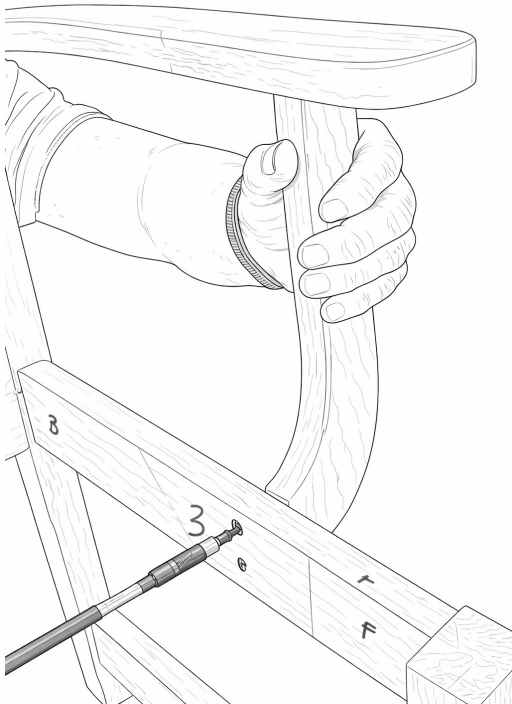

Step 4

If you have an arm chair, fasten to side rails as shown with 1 5/8" screws and glue. There is another bore underneath where it attached to chair back

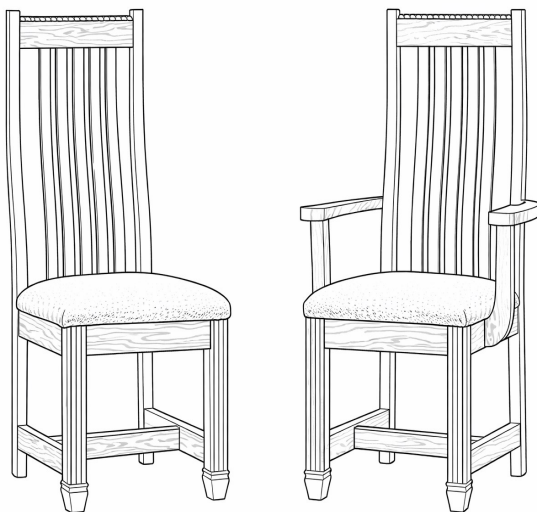

Step 5

Fasten seats with 2 1/2" screw through the bottom of the corner blocks. Let glue dry for a couple of hours before use.